


Red banana plug jack

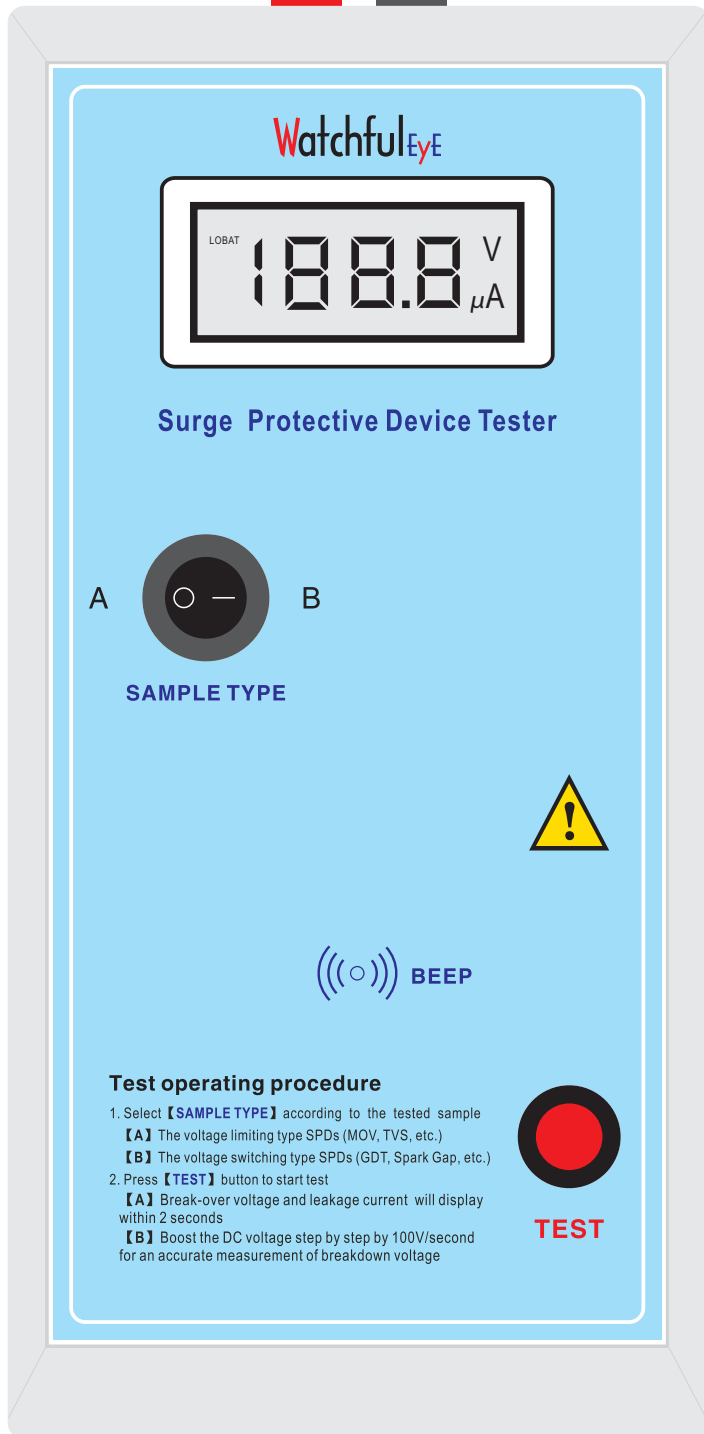

Black banana plug jack



Display

Standby mode



Low voltage



Voltage



Leakage current




Testing



No sample



Battery compartment

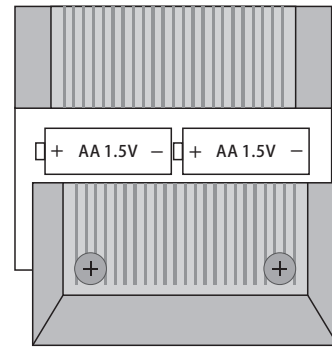


On the rear of the unit




Test Preparation

1. Connect to 5V2.5ADC external power supply or install 4 AA batteries. If batteries are used, press the red button (batteries power) on the right side . "0" will display on the screen, that is the standby mode.
2. Connect the test pens to the tester, clamp the SPD module to be tested, press the mode button to choose the testing mode according to the SPD type.

A position: for voltage limiting type SPD, such as MOV type SPD test
 B position: for voltage switching type SPD, such as GDT type SPD test

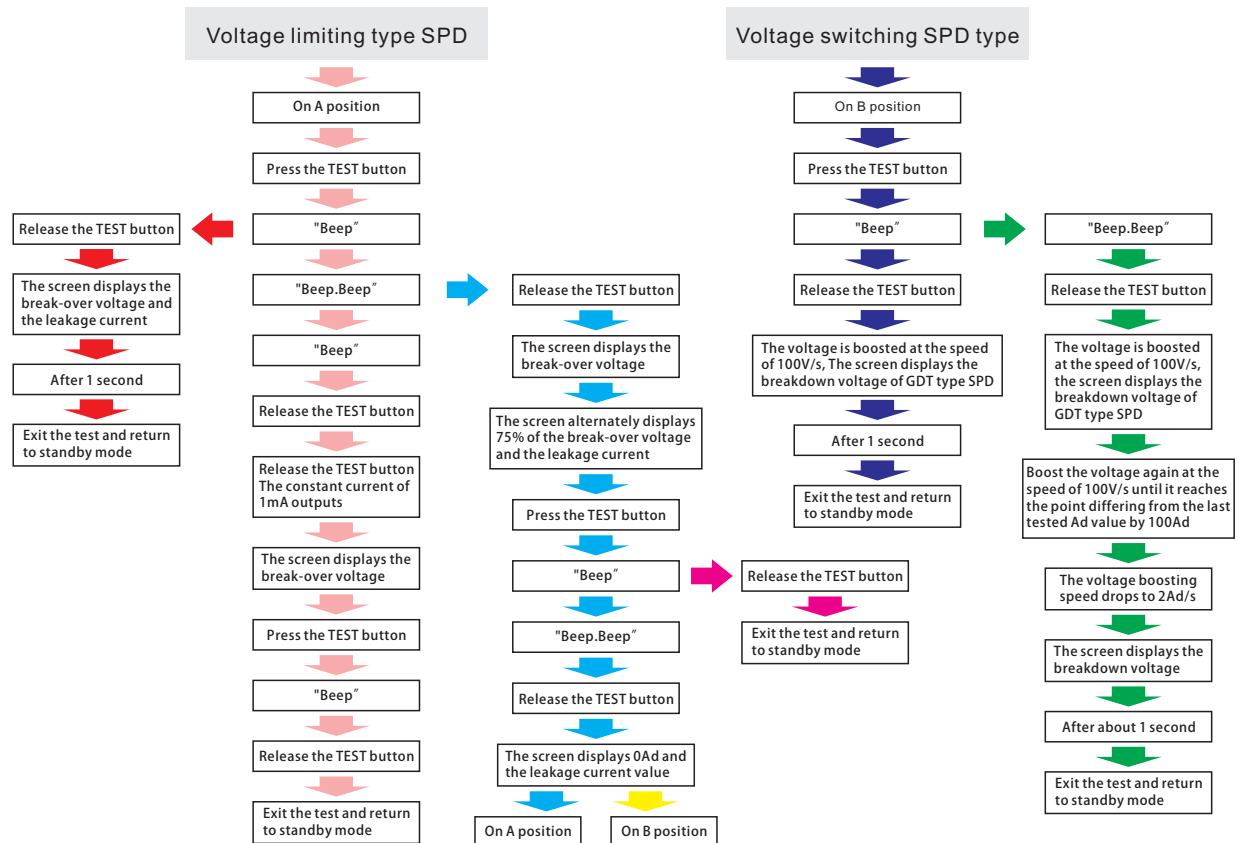

Break-over voltage calibration

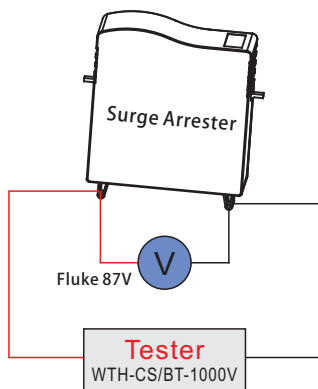

Leakage current calibration

